

## INGENIEUR POLYTECH LILLE IMA

**Projets IMA4 SC & SA 2018/2019**

**Manettes pour travaux pratiques**

**BOËNS QUENTIN**

## **PROCEDURE DE CONNEXION DE MANETTE**

**ATmega 16U2 A UN PC**

POLYTECH Lille  
Secrétariat IMA - Muriel Hoogstoel  
Boulevard Paul Langevin - Cité Scientifique  
59655 VILLENEUVE D'ASCQ CEDEX  
03-28-76-73-60  
03-28-76-73-61



Nom et adresse de l'entreprise :  
**AVIDSEN**  
**37 rue Augustin Fresnel**  
**37170 CHAMBRAY LES TOURS**

Encadrants école :  
**Xavier Redon**  
**Alexandre Boé**  
**Thomas Vantroys**

## I. Introduction et prérequis

La présente procédure est le mode opératoire détaillé de connexion d'une manette ATmega 16U2 à un PC en USB.

Les manipulations sont effectuées sous système d'exploitation Windows. Elles permettront de reconnaître aussi la manette sous Linux.

La reconnaissance de la manette est à faire par le logiciel ATMEL FLIP.

Pour installer le logiciel ATMEL FLIP, suivre le lien :

<http://www.pic-control.com/loading-arduino-bootloader-to-brand-new-atmel-microcontroller/>



### Loading Arduino Bootloader to brand new ATMEL Microcontroller

14-Feb-2017

Using the ATMEL FLIP software, you will be able to load firmware or bootloader using its default ATMEL DFU bootloader. You can download this FLIP software from ATMEL website. Or you can download here,


- JRE - Flip Installer - 3.4.7.112.exe, (21MB, updated August 2012), FLIP 3.4.7 for Windows (Java Runtime Environment included)

## II. Récapitulatif des softs à installer

Nom	Modifié le	Type	Taille
Firmware Updatetool v4.10 - Setup.exe	01/12/2018 14:22	Application	14 466 Ko
JavaSetup8u131.exe	01/12/2018 14:02	Application	722 Ko
JRE - Flip Installer - 3.4.7.112.exe	01/12/2018 13:51	Application	21 311 Ko
vcredist_x86.exe	01/12/2018 14:08	Application	4 955 Ko

### III. Configuration du FLIP

Le lancement de FLIP amène une erreur de dll.

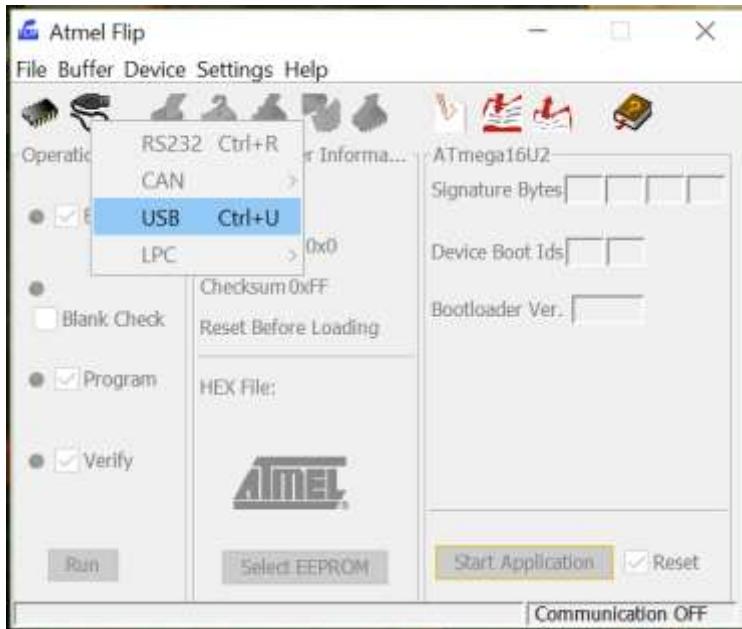

Les options restent grises et amènent le message d'erreur : « **AtLibUsbDfu.dll not found** »

L'installation de FLIP doit être finalisée par l'installation complète du pilote de la manette.

Le lien ci-dessous décrit l'ensemble des étapes à suivre :

<https://www.d-r.nl/forum/index.php?topic=13.0>

Ci-dessous le détail de la page. En suivant les instructions et les liens, il est possible de finaliser l'installation de la manette.

Welcome, **Guest**. Please login or register.  
Did you miss your activation email?

Forever  Login

Login with username, password and session length

SMF -

[Home](#) Help Search Login Register

D&R Forum » Products » Airlite » Firmware update tool: doesn't work or a message AtLibUsbDfu.dll not found shows

Pages: [1]

**Author** Topic: Firmware update tool: doesn't work or a message AtLibUsbDfu.dll not found shows (Read 843 times)

**DNR Support**  
Support Engineer  
Global Moderator  
Full Member  


Firmware update tool: doesn't work or a message AtLibUsbDfu.dll not found shows  
« on: December 08, 2017, 10:08:26 AM »

When you receive the message that the AtLibUsbDfu.dll isn't found or the update tool doesn't work.

First be sure that you have Java 32 Bits installed, even if you have a 64 Bits Windows.  
The firmware update tool needs Java files that are installed with the 32 Bits version.

*When you receive the message that the AtLibUsbDfu.dll isn't found or the update tool doesn't work.*

**First be sure that you have Java 32 Bits installed, even if you have a 64 Bits Windows.**  
**The firmware update tool needs Java files that are installed with the 32 Bits version.**


[http://javadl.oracle.com/webapps/download/AutoDL?BundleId=220284\\_d54c1d3a095b4ff2b6607d096fa80163](http://javadl.oracle.com/webapps/download/AutoDL?BundleId=220284_d54c1d3a095b4ff2b6607d096fa80163)

*Some users still receive the error message: Firmware update failed! Make sure console is connected and in bootloader mode, they are probably missing the Microsoft Visual Studio drivers:*

<https://www.microsoft.com/en-us/download/details.aspx?id=5555>

**The message AtLibUsbDfu.dll not found can be solved by following this video:**

<https://youtu.be/oWNRIsJQvCk>

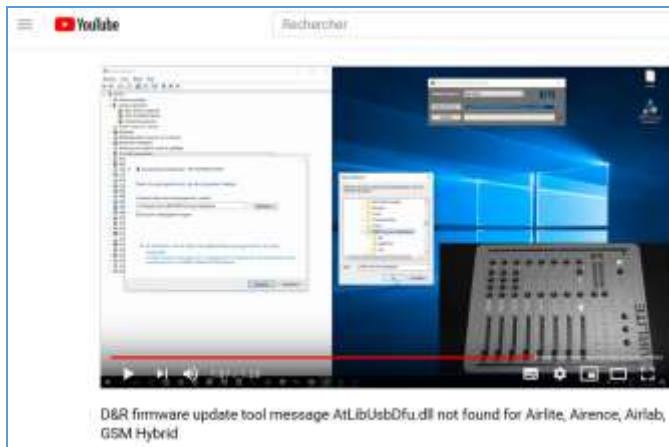

*Q: My computer doesn't show all USB sources in the devices list (USB Audio codec or other source not shown)*

*A: Did you use the original length USB cable with a Maximum of 1,8 meters? A longer cable reduces the bandwidth of the USB connection so please use a short cable.*

*A: Did you use a connection at the front of the computer, a ground loop isolator or a USB hub connected. Please use a USB connector directly to the mainboard of the computer.*

*Q: My computer shows a message that it doesn't have enough USB resources or end points.*

*A: Some computers use a extended USB 3.0 port that combines multiple USB2.0 ports and also the amount of end points. Each USB device has multiple end points and a Airlite has multiple USB devices connected to a internal hub. When connecting a Airlite it can reach the maximum of USB end points at a combined/extended USB 3.0 connection. Some computers offer the possibility to turn off xHCI in the bios. When turned off it will work as USB 2.0 and be able to connect more end points. The other option can be adding a USB 2.0 card to the computer.*

**The firmware update tool and firmware updates can be downloaded at our download page:**

<http://www.d-r.nl/wiki/dokuwiki/doku.php?id=software:start>

### Firmware Update

>>> INSTALL LATEST UPDATERTOOL(4.00) AS ADMINISTRATOR BEFORE UPDATING FIRMWARE OF YOUR MIXER!! <<<



(For the Airence and Airlab the AtLibUsbDfu.dll device in the device manager is shown as "Unknown Device")

\*\*NOTE: This application requires JAVA 32-bits to be installed. Please download and install the latest version first:

[http://javavdl.oracle.com/webapps/download/AutoDL?BundledId=220284\\_d54c1d3a095b4f2b6607d096a80163](http://javavdl.oracle.com/webapps/download/AutoDL?BundledId=220284_d54c1d3a095b4f2b6607d096a80163)

Some users still receive the error message: Firmware update failed! Make sure console is connected and in bootloader mode, they are probably missing the Microsoft Visual Studio drivers;


<https://www.microsoft.com/en-us/download/details.aspx?id=5555>

« Last Edit: January 31, 2018, 09:21:11 AM by DNR Support »


## IV. Installation du pilote

Installer le firmware « Firmware update tool (Airence/Airlite/SSM Hybrid webstation / Airlab) ».


Dans le gestionnaire des périphériques, ouvrir les propriétés de l'ATmega.

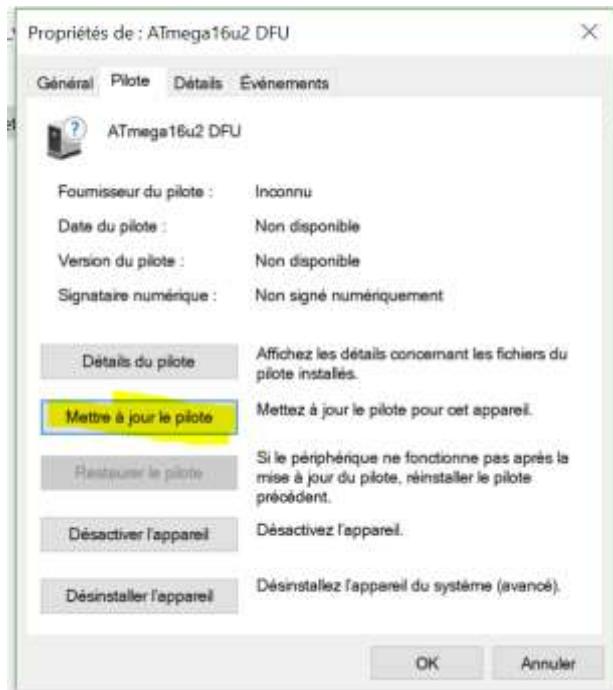

Pour trouver le pilote : C:\Program Files (x86)\D&R Firmware Updatetool


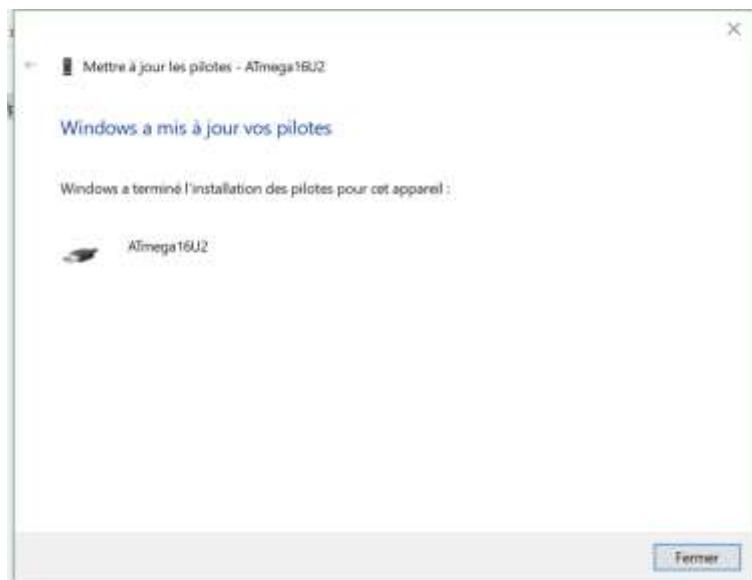


Le périphérique est alors reconnu.

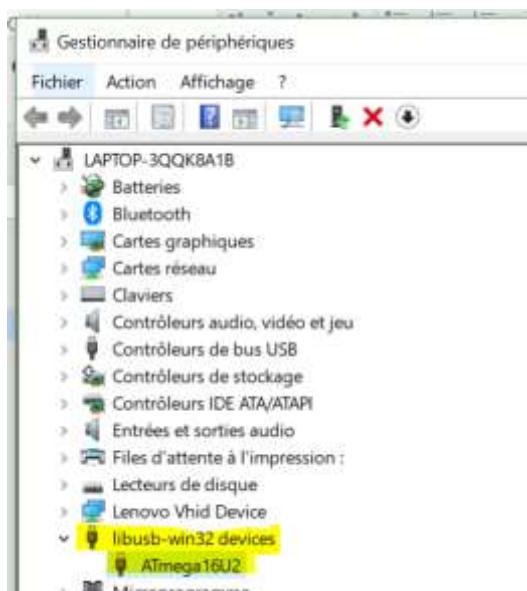


## V. Finaliser la configuration avec Flip

Dans flip, on finalise la configuration pour la connexion manette-PC.

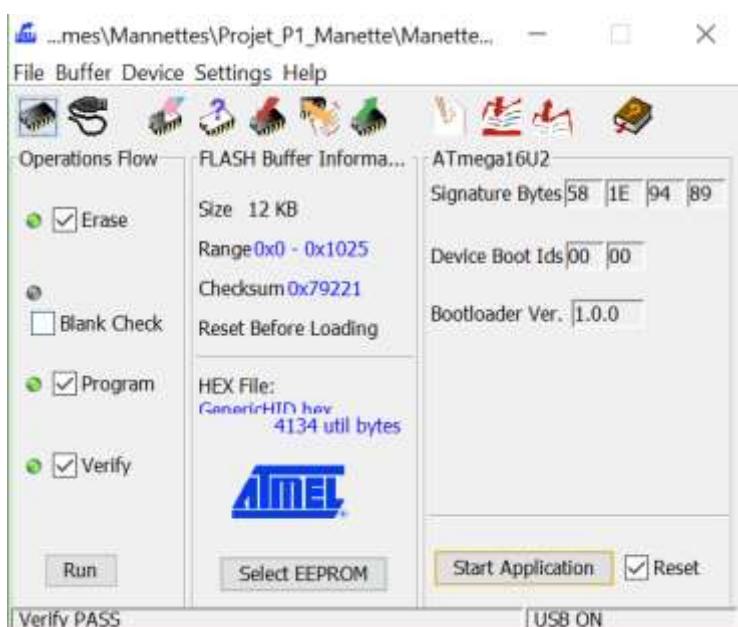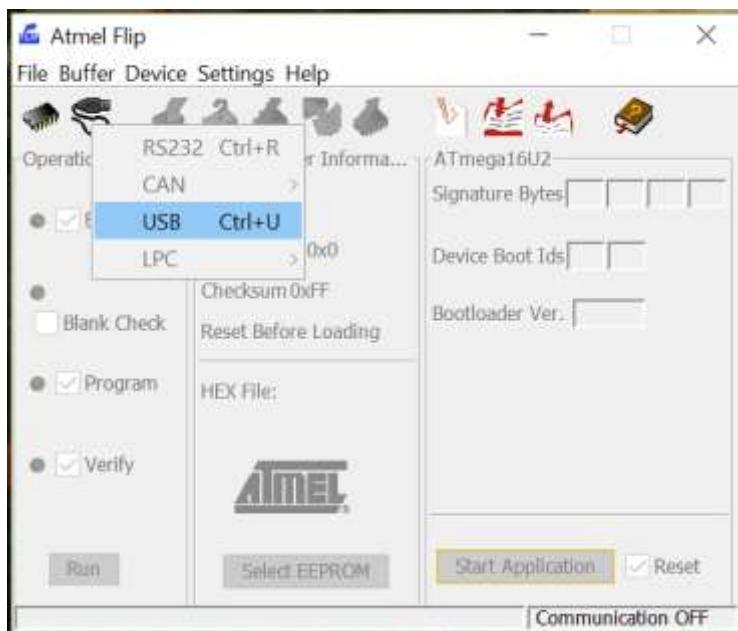

Dans le gestionnaire de périphériques

Sans la manette :

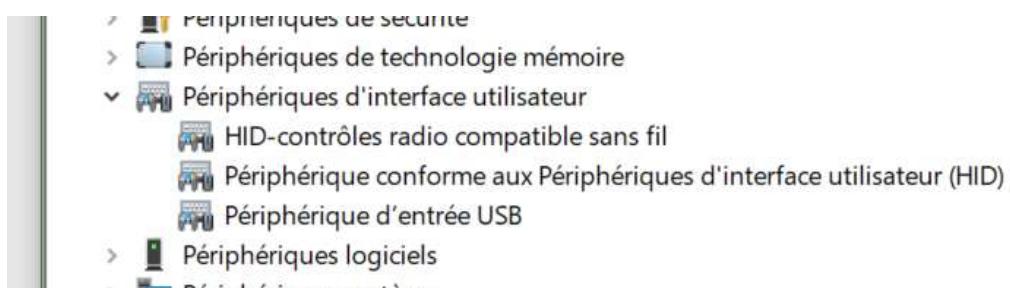

Quand la manette est connectée :

- >  Périphériques de technologie mémoire
- >  Périphériques d'interface utilisateur
  -  HID-contrôles radio compatible sans fil
  -  Périphérique conforme aux Périphériques d'interface utilisateur (HID)
  -  Périphérique d'entrée USB
  -  Périphérique d'entrée USB
  -  Périphérique fournisseur HID
- >  Périphériques logiciels
- > 